

MOORING WHIP INSTALLATION GUIDE

CONTENTS

- 2 x whips in two halves
- 2 x flush whip bases
- Whip base stainless steel nuts, bolts and washers
- Mooring line

Our whips arrive in two halves which can, if required, be epoxied together. However, it is common to leave these loose to enable easy storage – please note that it is important to align the end of the whip and the cleat when assembling.

INSTALLATION OF BOAT MOUNTED MOORING WHIPS BASES

The flush mounted mooring whip bases should be located opposite the attachment point on the tender. Ideally at opposite ends of the tender. The farther apart the attachment points are, the better. It is preferable for the poles to be pointing towards the tender at 90 degrees.

POLES

Do not be afraid to bend the poles. The more bend in the pole the more resistance you will get between mothership/dock and tender.

LINES

Two breast lines, and two spring lines must be used. Adjusting the lines so they are all taught when the whips are on the tender will keep the tender in a stationary position, this will also keep the whip poles from bending sideways. We want the whips to remain perpendicular to the attachment points at all times. The breast and spring lines should be at a length that holds the tender, a minimum of 1.8 metres, away from the dock or gunwhale.